


Sidewalks / Paths / Streets/ Kerbs / Medians / Tennis Courts

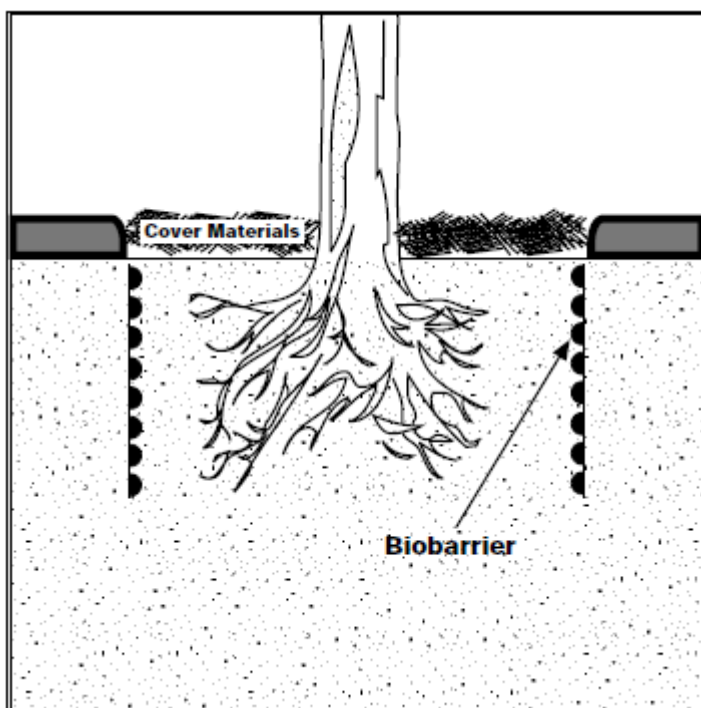


Dig a trench adjacent to hardscape (as close as possible) insuring depth is below where existing roots are found. After trenching, remove remaining roots, leaving walls of trench smooth. Place top edge of Biobarrier® at finished grade level, securing with installation strips and /or pins. Backfill carefully to avoid dislocating Biobarrier® and compact firmly.

Refer to Biobarrier General Guidelines & Vertical Instructions

Swimming Pools

Dig a trench adjacent to hardscape, pruning and removing any existing roots, leaving trench clean. Place Biobarrier at finished grade level, securing with pins provided. Backfill the trench, compact the dirt firmly to ensure there are no gaps. If possible, trench should be cut at least 30cm from pool edge to allow for future root swell.

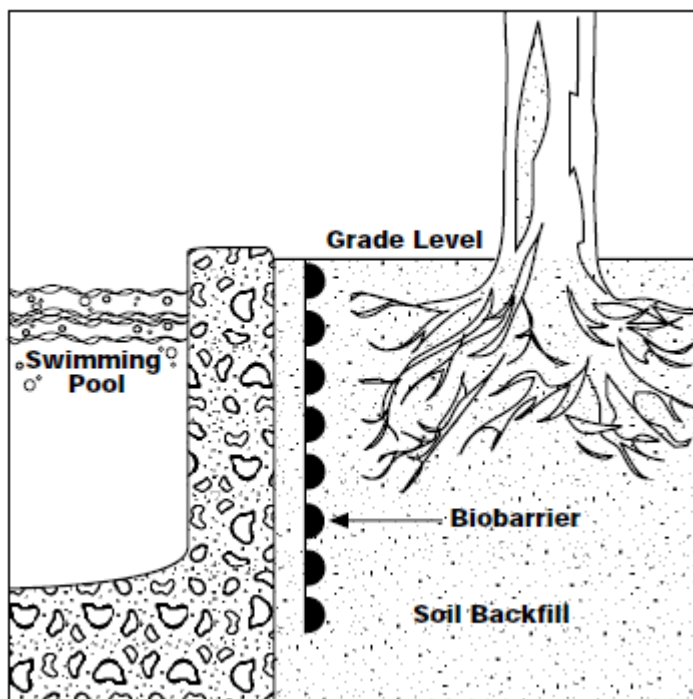

Refer to Biobarrier General Guidelines & Vertical Instructions